



All engines  
with dry air filter


Under normal dust conditions, replace air filter element every 50 000 km (30 000 miles).

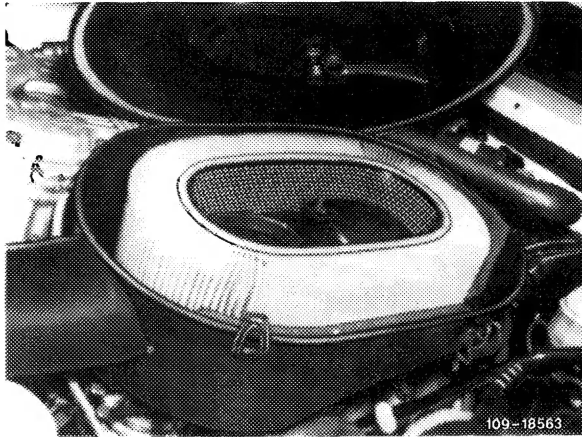

Engine 110

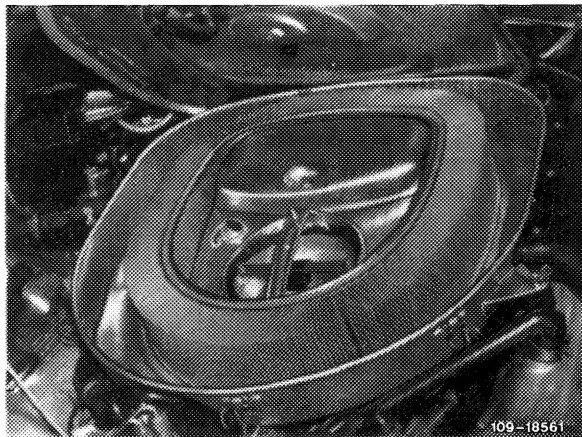

Engine 117

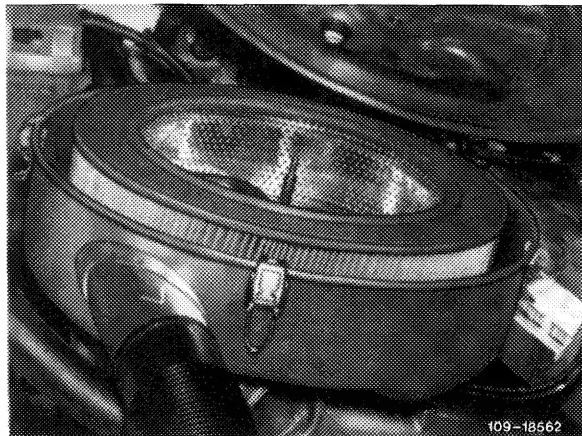

Engine 617,912

- Remove filter cover and remove element.

- Clean air filter cover and housing.

**Attention!** Do not use cotton waste.

- Install new element, observing correct seat of rubber ring and cover.